



INSTALL & OPERATE · ROLL-UP FAST CHARGER · EVQC-M

# EVQC0xx-M

30 - 60 kW Mobile "Shop" DC EV Quick Charger

Installation and Operation Manual · Pii document MNL217



Supplied through the Pii Channel Partner Program · Carbon Advisors, authorized manufacturer's representative  
Power Innovations International · American Fork, Utah · [powerinnovations.co](http://powerinnovations.co)

# Support, service, and how this manual is maintained

## The controlled document

---

The technical content that follows is Pii's manual MNL217 reproduced in full and unmodified. It is the controlled engineering document and governs.

## Qualified personnel only

---

Installation and commissioning are performed by certified partners or by Pii. Commissioning completes warranty registration and optional enrollment in 24/7 NOC monitoring from Plano, Texas.

## Getting help

---

powerinnovations.co · Free Site Check at [powerinnovations.co/site-check](https://powerinnovations.co/site-check): one utility bill, two photos, one week · Partner program: [powerinnovations.co/partners](https://powerinnovations.co/partners)

## Keep this manual current

---

Confirm with the program team that MNL217 is the current revision before a new installation.

**Will it run on the power your site already has?**

**[powerinnovations.co/site-check](https://powerinnovations.co/site-check)**

# *Indoor Mobile EV Quick Charger*

*Models:*

*EVQC0xx-MxRx*

*EVQC0xx-MxBx*

## *Installation and Operation Manual*



**READ THIS MANUAL CAREFULLY**

**SAVE ALL INSTRUCTIONS**

**INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ**

**CONSERVER CES INSTRUCTIONS**

This manual contains important information regarding Power Innovations International products or processes listed on the title page. Please read all instructions carefully before assembling, installing, or operating equipment. Keep this manual handy for easy reference.

This manual may accompany other instructional guides or manuals for standard installation and operations of the supported products. Please contact Power Innovations if you need additional guides or manuals and have not received them.

Product names mentioned herein may be trademarks (™) and/or registered trademarks (®) of their respective companies, which may include Power Innovations International, Inc. (part of LiteOn Group), LiteOn Technology Corporation, or a third party.

**Copyright © 2023-2025**

Power Innovations International, Inc.; American Fork, UT, USA  
*All rights reserved.*

# Contents

---

|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
| <b>1— Product Overview .....</b>                                                  | <b>1</b>  |
| 1.1 Introduction .....                                                            | 1         |
| 1.2 Highlighted Features of Mobile EV Quick Chargers .....                        | 1         |
| 1.3 Charger Features Identified .....                                             | 2         |
| 1.4 Symbols Used in this Manual .....                                             | 3         |
| 1.5 Acronyms Used in this Manual .....                                            | 3         |
| <b>2— Safety and Specifications .....</b>                                         | <b>4</b>  |
| 2.1 IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS .....                 | 4         |
| 2.2 Specifications – Mobile EV Quick Charger Models EVQC0xx-Mxxx .....            | 5         |
| <b>3— Installing EV Charger .....</b>                                             | <b>6</b>  |
| 3.1 What’s Provided with Charger .....                                            | 7         |
| 3.2 Additional Tools and Supplies Required .....                                  | 7         |
| 3.3 Prepare Installation Site .....                                               | 8         |
| 3.4 Install Shelf Controllers and Power Supply Units .....                        | 8         |
| 3.5 Configure Cellular Modem (if available on Unit) and Register on Network ..... | 11        |
| 3.6 Configure and Wire AC Input Power .....                                       | 12        |
| <b>4— Setting Up Power Level and Operating EV Quick Charger .....</b>             | <b>17</b> |
| 4.1 Set Power Level for Desired Operating Location .....                          | 17        |
| 4.2 Operate EV Quick Charger .....                                                | 19        |
| <b>5— Maintaining EV Charger .....</b>                                            | <b>21</b> |
| 5.1 Clean Air Vents and Filter .....                                              | 21        |
| 5.2 Replace Air Filter .....                                                      | 22        |
| 5.3 Restart after Emergency Stop .....                                            | 22        |
| <b>6— Regulatory .....</b>                                                        | <b>23</b> |
| <b>7— Warranty .....</b>                                                          | <b>23</b> |
| <b>8— Contact Information .....</b>                                               | <b>24</b> |

This page left blank intentionally.

# 1—Product Overview

This section provides product overview to Power Innovations International Mobile EV Quick Charger models--those with RFID only (EVQC0xx-MxRx series) and those with both RFID and Modem (EVQC0xx-MxBx series).

## 1.1 Introduction

This EV quick charger is an electric vehicle (EV) power supply that is on swivel casters with locks so it can be easily moved to different locations within a facility. After it's initially installed and made operational in one location within a facility, an operator can plug the EV charging cable into their electric vehicle and start a charging session. Later, when charger is needed in a new location, an operator can relocate it by powering it down and unplugging it before moving it, and then plugging it in and powering it up again in the new location before starting next charging session.

Although some assembly is initially required, each mobile quick charger ships with all parts required for installation except the input cabling and wire, which is provided by the installer or end user.


Use this document to help you:

1. Safely prepare installation site
2. Install power modules and shelf controllers
3. Configure cellular modem and register charger on network
4. Configure and wire AC input power to quick charger
5. Operate EV quick charger (Charge an electric vehicle)
6. Maintain EV quick charger

## 1.2 Highlighted Features of Mobile EV Quick Chargers

| Feature                | Description                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------|
| AC Input Power Options | 240V single-phase<br>208/240V 3-phase Delta (3-wire + PE)<br>480V 3-phase Wye (3-wire + Neutral + PE) |
| DC Output Power        | Up to 60 kW                                                                                           |
| Communication          | RJ45 Bulkhead Connector (Optional Cellular 4G LTE Network, Wi-Fi)                                     |
| User Interface         | Emergency Stop Button<br>LCD Screen<br>RFID Tap authorization<br>Power Up button<br>Power Down button |

## 1.3 Charger Features Identified

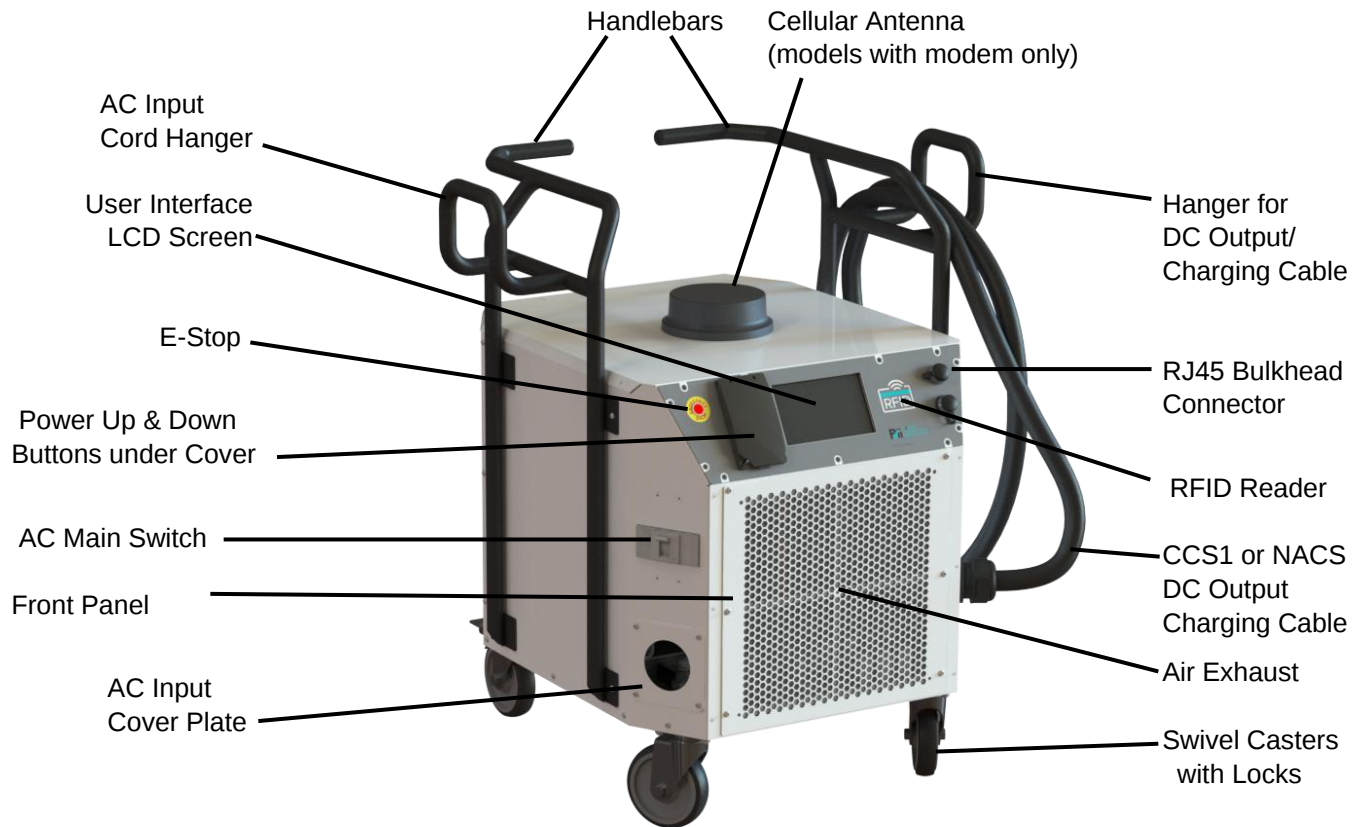

*Figure 1—Front View of Mobile EV Quick Charger Model EVQC060-MxBx*

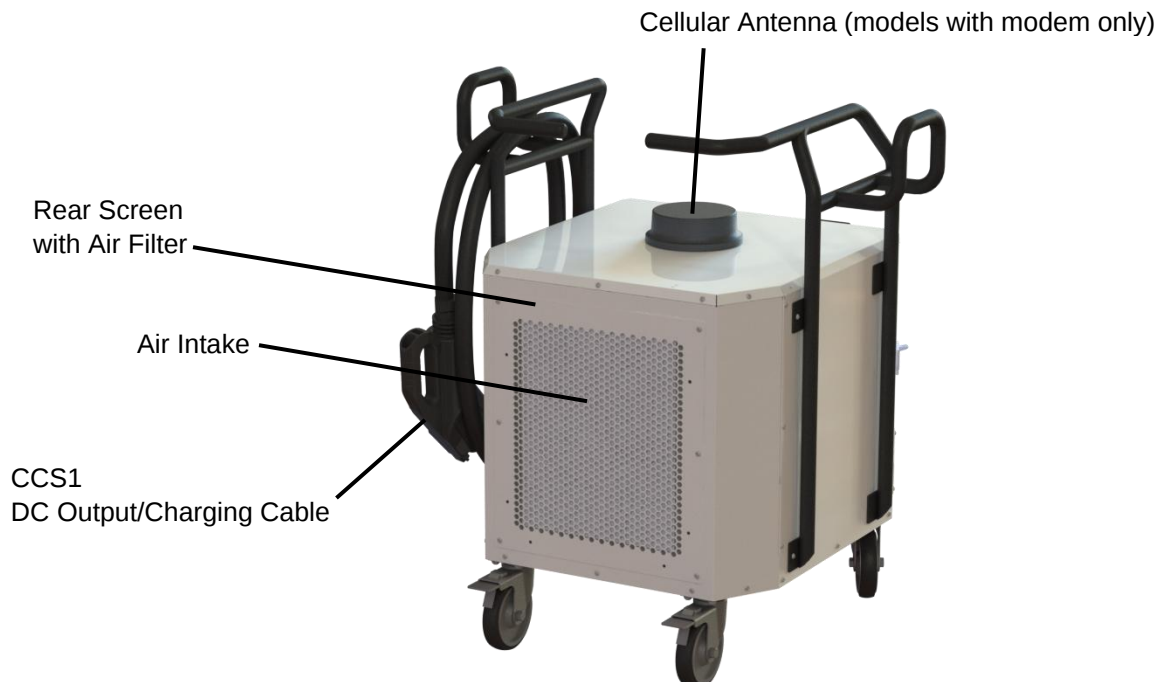


Figure 2—Back View of Mobile EV Quick Charger Model EVQC060-MxBx

## 1.4 Symbols Used in this Manual

Icons or symbols are occasionally used throughout this manual to help identify safety warnings and other pertinent content contained here. These icons are described in the table below.

| Icon                                                                               | Type of Warning            | Description                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <b>ELECTRICAL WARNINGS</b> | <b>WARNING! RISK OF ELECTRIC SHOCK!</b><br>ADDITIONAL TEXT THAT FOLLOWS THIS SYMBOL PROVIDES MORE INFORMATION ABOUT THE SPECIFIC WARNING.                                                                                      |
|   | <b>WARNINGS</b>            | <b>WARNING! RISK OF ELECTRIC SHOCK!</b><br>ADDITIONAL TEXT THAT FOLLOWS THIS SYMBOL PROVIDES MORE INFORMATION ABOUT THE SPECIFIC WARNING.                                                                                      |
|   | <b>CAUTION!</b>            | <b>CAUTION!</b><br>Indicates a potentially hazardous situation which, if not avoided, can result in minor to moderate injury, or serious damage to the equipment. Important safety measures may also be described in Cautions. |
|  | <b>Note</b>                | <b>Note</b><br>Offers practical advice that may be helpful but can be disregarded.                                                                                                                                             |

## 1.5 Acronyms Used in this Manual

| Acronym | Explanation         |
|---------|---------------------|
| AC      | Alternating Current |
| DC      | Direct Current      |
| EV      | Electric Vehicle    |

## 2—Safety and Specifications

---

The following safety instructions apply throughout the EV Charger installation process. Be familiar with them before moving on to the next section to complete the installation.

### 2.1 IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS

#### INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ CONSERVER CES INSTRUCTIONS



##### **ELECTRICAL WARNINGS – WARNING! RISK OF ELECTRIC SHOCK!**

##### **WARNING! RISK OF ELECTRIC SHOCK!**

ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS TYPE OF EQUIPMENT AND THE HAZARDS INVOLVED SHOULD ADJUST, MODIFY, AND SERVICE THIS EQUIPMENT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.

##### **WARNING! RISK OF ELECTRIC SHOCK!**

READ THIS MANUAL THOROUGHLY PRIOR TO INSTALLING AND ENERGIZING THE EQUIPMENT. INSPECTION AND MAINTENANCE OF THIS EQUIPMENT SHOULD BE PERFORMED IN ACCORDANCE WITH THE PROCEDURES DETAILED IN THIS MANUAL.

##### **WARNING! RISK OF ELECTRIC SHOCK!**

THIS UNIT CONTAINS NO INTERIOR PARTS THAT CAN BE SERVICED WITHOUT QUALIFIED PERSONNEL. IF MAINTENANCE PROCESSES SPECIFIED IN THIS MANUAL FAIL TO SOLVE THE PROBLEM, QUALIFIED PERSONNEL MUST SERVICE THE UNIT.

##### **WARNING! RISK OF ELECTRIC SHOCK!**

THE PURPOSE OF THIS MANUAL IS TO PROVIDE YOU WITH INFORMATION NECESSARY TO SAFELY INSTALL, OPERATE, AND MAINTAIN THIS EQUIPMENT. KEEP THIS MANUAL FOR FUTURE REFERENCE.

##### **WARNING! RISK OF ELECTRIC SHOCK!**

SHUT OFF POWER SUPPLY BEFORE BEGINNING INSTALLATION ACTIVITIES OR MAINTENANCE WORK. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.

##### **WARNING! RISK OF ELECTRIC SHOCK!**

THIS EV QUICK CHARGER CONTAINS HIGH VOLTAGE POWER THAT IS POTENTIALLY DANGEROUS IF NOT HANDLED PROPERLY.



**CAUTION!** The installer is responsible for conforming to all local and national electrical codes and standards applicable in the jurisdiction this equipment is installed in, including providing suitable wire sizes per NEC for the input configuration.

## 2.2 Specifications – Mobile EV Quick Charger Models EVQC0xx-Mxxx

| Electrical Specifications                                            |                                                                                                                                                              |
|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AC Input</b>                                                      |                                                                                                                                                              |
| AC Input Power Options<br>(Field configuration patent pending)       | 240V single-phase<br>208/240V 3-phase Delta (3-wire + PE)<br>480V 3-phase Wye (3-wire + Neutral + PE)                                                        |
| AC Input Voltage Operating Range and Current                         | 240V single phase: 216V to 252V, 225A max, 60 Hz<br>208V/240V 3 phase Delta: 190V to 252V, 195A max, 60 Hz<br>480V 3 phase Wye: 432V to 504V, 85A max, 60 Hz |
| Recommended upstream overcurrent protection device rating            | 240V single phase: 400A<br>208V/240V 3 phase Delta: 250A<br>480V 3 phase Wye: 125A                                                                           |
| Power factor                                                         | > 0.98                                                                                                                                                       |
| Efficiency                                                           | > 95% @ full load                                                                                                                                            |
| <b>DC Output</b>                                                     |                                                                                                                                                              |
| Maximum DC Output Power                                              | Up to 60 kW                                                                                                                                                  |
| DC Output Voltage Range                                              | 250V – 920V                                                                                                                                                  |
| Maximum DC Output Current                                            | 150A with DC output < 450V<br>75A with DC output > 450V                                                                                                      |
| DC Connector Options                                                 | CCS1 or NACS                                                                                                                                                 |
| DC Charging Cable Length                                             | 5 m (16.4 ft.) standard                                                                                                                                      |
| <b>Dimensions and Weights</b>                                        |                                                                                                                                                              |
| Dimensions for Charger with Handlebar-Hangers and Wheels (H x W x D) | 843 x 820 x 610 mm (33.2 x 32.2 x 24 in.)                                                                                                                    |
| Dimension Charger with Wheels only (H x W x D)                       | 615 x 559 x 610 mm (24.2 x 22 x 24 in.)                                                                                                                      |
| Weight – 60 kW Mobile EV Quick Charger                               | Pre-install (no PSUs or SCs loaded) = 65 kg (143 lbs.)<br>Fully Loaded = 110 kg (243 lbs.)                                                                   |
| <b>Environment Specification</b>                                     |                                                                                                                                                              |
| Operating Temperature Range                                          | -30°C to +50°C                                                                                                                                               |
| Storage Temperature Range                                            | -40°C to +60°C                                                                                                                                               |
| Ingression Protection of Enclosure                                   | IP20, NEMA 1                                                                                                                                                 |
| Humidity                                                             | 95%                                                                                                                                                          |
| Altitude - Operation                                                 | 2000 m (6560 ft.)                                                                                                                                            |
| <b>Certificate/Compliance</b>                                        |                                                                                                                                                              |
| Complies with UL Standards for Safety                                | cETLus listed to UL 2202, UL2231-1 & -2, and CSA C22.2 No. 281.1, 281.2 and 346                                                                              |

## 3—Installing EV Charger

---



 

### **ELECTRICAL WARNINGS – WARNING! RISK OF ELECTRIC SHOCK!**

**WARNING! RISK OF ELECTRIC SHOCK! SHUT OFF POWER SUPPLY BEFORE BEGINNING INSTALLATION ACTIVITIES AND BEFORE REMOVING EV QUICK CHARGER'S AC SERVICE PANEL FOR ANY INSTALLATION OR MAINTENANCE WORK. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**

**WARNING! RISK OF ELECTRIC SHOCK! ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS TYPE OF EQUIPMENT AND THE HAZARDS INVOLVED SHOULD ADJUST, MODIFY, AND SERVICE THIS EQUIPMENT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**

**WARNING! RISK OF ELECTRIC SHOCK! DO NOT CONNECT POWER SUPPLY TO THE EV QUICK CHARGER UNTIL THE WIRING AND BUS BAR CONFIGURATION IS COMPLETE AND THE AC SERVICE PANEL IS IN PLACE AND SECURE.**

## 3.1 What's Provided with Charger
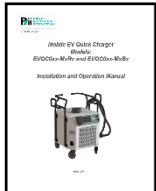
| EVQC0xx-MxRx or EVQC0xx-MxBx                                                        | Description                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | 1 Mobile EV Quick Charger model (with or without modem and cellular antenna), for up to DC 60kW output, fully assembled exterior                                |
|    | Up to 6 Shelf Controllers (SCs)                                                                                                                                 |
|    | Up to 18 Power Supply Units (PSUs)                                                                                                                              |
|    | 3 Configuration Bus Bars, each uniquely configured (ship anchored in storage location inside charger)                                                           |
|   | 3 cable plates (1.5", 2", 2.5" diameter hole)                                                                                                                   |
|  | 3 cable glands/cord grips, thread diameters include: 38.1 mm, 50 mm, 63.5 mm (1.5", 2", 2.5")                                                                   |
|  | 1 manual, MNL217 (this document):<br><i>Mobile EV Quick Charger</i><br><i>Models: EVQC0xx-MxRx and EVQC0xx-MxBx</i><br><i>Installation and Operation Manual</i> |

## 3.2 Additional Tools and Supplies Required

- Metric Allen wrench set
- T25 Torx T-handle screwdriver
- Philips Screwdriver
- Electrical AC Input Cable
- Ring Terminals (Lugs) - suitable for accepting cables of the required input current per NEC and Cu or Al wires

### 3.3 Prepare Installation Site

Become familiar with basic dimensions of the Mobile EV Quick Charger and Installation Site warning and best practice(s).


1. Basic dimensions of Mobile EV Quick Charger, models EVQC0xx-MxRx and EVQC060-MxBx, with hangers and swivel casters are shown in Figure 3.

2. Select storage and operation locations that are not hazardous.



#### ELECTRICAL WARNINGS

**WARNING! RISK OF ELECTRIC SHOCK!  
DO NOT STORE OR OPERATE CHARGER  
IN A HAZARDOUS LOCATION.**

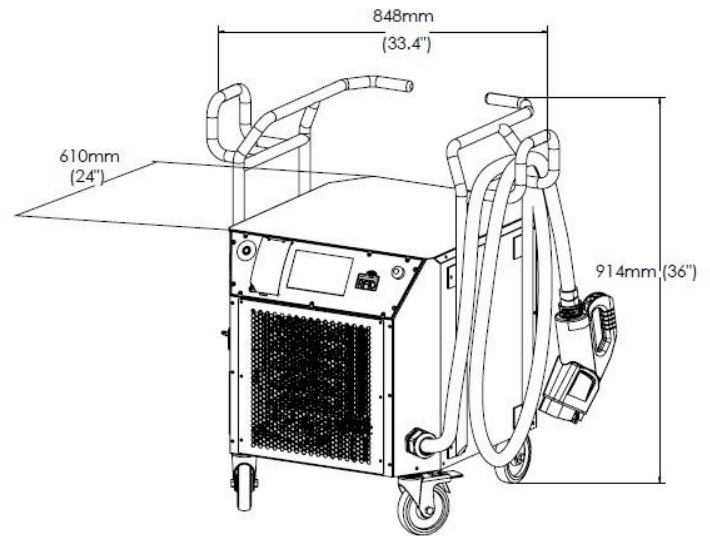

**Figure 3—Depth, Width, and Height of Mobile Charger (includes Handles and Wheels)**

3. Best practice for mobile EV Quick Charger installation locations:  
Select indoor storage location where charger will not be in direct sunlight or exposed to precipitation.

### 3.4 Install Shelf Controllers and Power Supply Units



#### ELECTRICAL WARNINGS – WARNING! RISK OF ELECTRIC SHOCK!

**WARNING! RISK OF ELECTRIC SHOCK! ENSURE POWER SUPPLY IS SHUT OFF BEFORE STARTING OR CONTINUING INSTALLATION ACTIVITIES AND BEFORE OPENING EV QUICK CHARGER'S PANELS. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**

This EV Quick Charger ships with many of its components pre-installed, such as CCS1 or NACS charging cable. Essential charger components that do not ship preinstalled are shelf controllers (SCs) and power supply units (PSUs). These can be installed anytime and in any order prior to powering the charger on.


To install shelf controllers and power supply units:

1. Ensure AC power to mobile quick charger is turned OFF at charger's AC main switch.

**Figure 4—AC main power switch in the OFF position**




2. Using a T25 Torx T-handle screwdriver, remove 10 buttonhead screws around perimeter of Rear Screen securing it to the charger (Figure 5), then set Rear Screen and 10 screws aside.

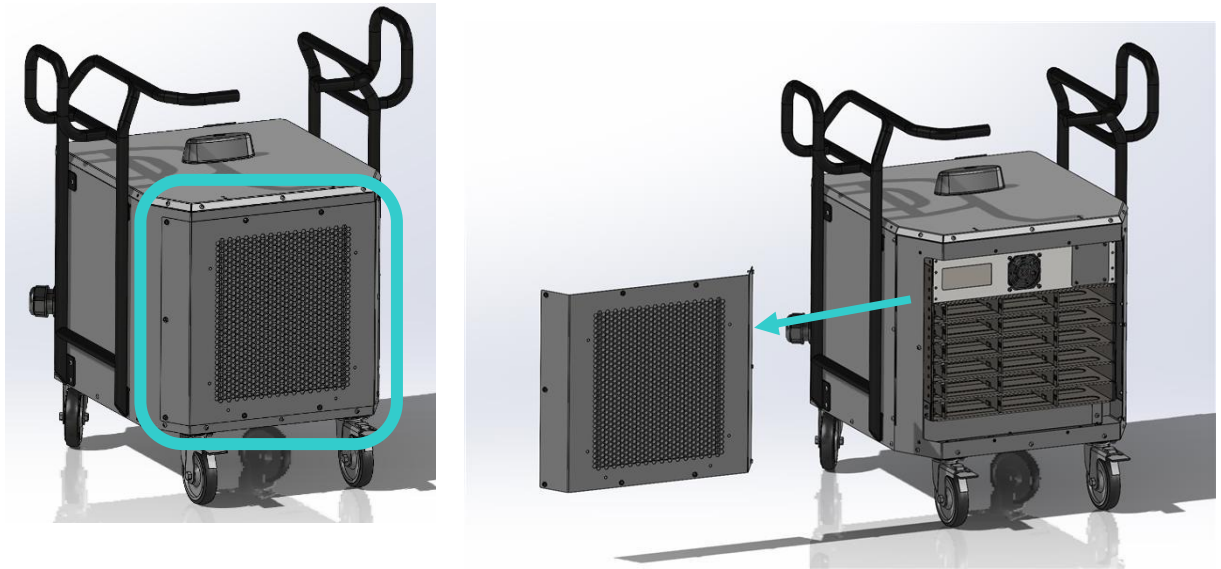

**Figure 5—Removal of Rear Screen from Charger**

3. Refer to Figure 6 to become familiar with empty power stack shelves, shelf controllers (SCs), power supply units (PSUs) and the required orientation of each before continuing.

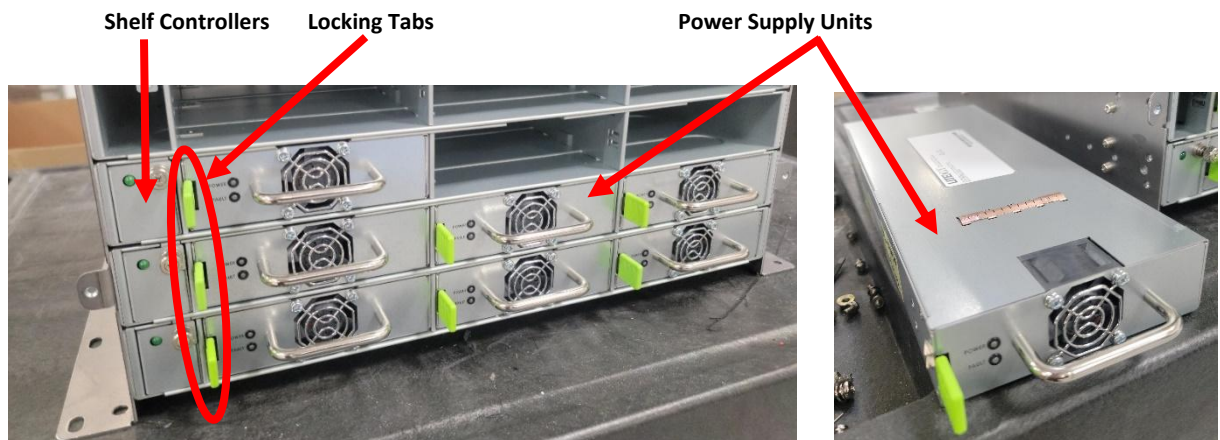

**Figure 6—Orientation to Shelf Controllers and Power Supply Units**

4. Insert up to 6 Shelf Controllers (SCs), 1 on each shelf (Figure 7) and secure with built-in screw (Figure 8). Load the shelves from the bottom up so that any open slots for SCs end up on the top shelves.

For example: If you ordered a 30 kW Mobile EV charger, load the 3 SCs provided into the 3 lowest SC slots and leave the 3 highest SCs slots empty.



**Figure 7—Install Shelf Controllers**



**Figure 8—Secure Shelf Controllers**

5. Insert up to 18 power supply units (PSUs), 3 on each shelf (Figure 6) and ensure each PSU release lever clicks into the locked position. Load the shelves from the bottom up so that any open slots for PSUs end up on the top shelves.

For example, if you ordered a 30 kW Mobile EV charger, load the 9 PSUs provided into the 9 PSU slots available on the 3 lowest shelves and leave the 9 PSU slots on the 3 highest shelves empty.



**Note:** When a 30 kW Mobile EV charger is loaded with the SCs and PSUs required, every slot in the 3 bottom shelves is filled and every slot in 3 top shelves is empty.

**Note:** When a 60 kW Mobile EV charger is loaded with the SCs and PSUs required, every slot in all 6 shelves is filled.

6. (Conditional) If unit has cellular modem installed, leave Rear Screen open and skip to next section to configure cellular modem now.
7. Re-attach Rear Screen to back of charger using a T25 Torx T-handle screwdriver and the 10 original buttonhead screws around the perimeter of the screen.

## 3.5 Configure Cellular Modem (if available on Unit) and Register on Network

If a cellular modem is not installed on your mobile charger, skip to Section 3.6.



### **WARNING! RISK OF ELECTRIC SHOCK!**


**DO NOT CONNECT POWER SUPPLY TO EV QUICK CHARGER UNTIL PHYSICAL SIM CARDS ARE INSERTED INTO CELLULAR MODEM AND TOP PANEL COVER AND SCREWS ARE REINSTATED.**



Note: Physical SIM cards for cellular modem must be provided by product owner or administrator.

To configure cellular modem with physical SIM card and register the charger on the backend network:

1. Ensure AC power to EV Quick charger is turned OFF at site's AC breaker or charger's AC main switch.
2. If EV charger's rear screen is secured to charger, use a T25 Torx T-handle screwdriver to remove the 10 buttonhead screws around perimeter of rear screen securing it to the charger, then set rear screen and screws aside to expose the mounted cellular modem (upper-right near rear fan).

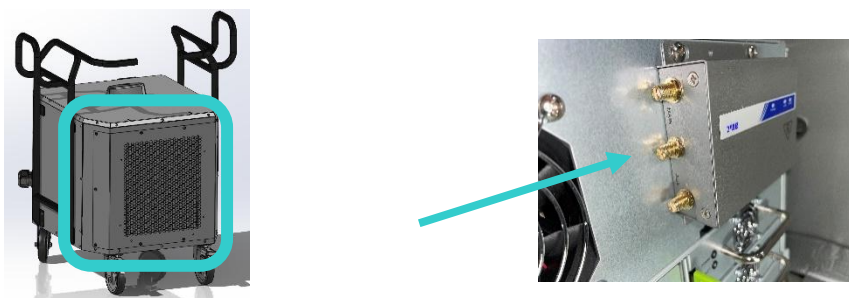

**Figure 10—Remove Rear Cover to access cellular modem**

3. Inside open rear of charger, locate the attached cellular modem and then remove one or two screws from face of cellular modem as indicated in Figures 11 and 12 (depends on the brand of modem included), and then remove slot cover to expose modem's expansion slots.



**Figure 11— For Amit Modem, remove 2 screws and slot cover to expose SIM card slots**



**Figure 12 – For Peplink Modem, remove 1 screw and small slot cover to expose SIM card slots A and B**

4. Insert a SIM card in slot A only.
5. Return slot cover to its original position on modem and secure it with original screw(s).

6. Register this EV charger as one of the supported devices on the owner's backend network. Later when you configure and wire the AC power input and you apply power to the charger, the modem will find the cellular network and attempt to automatically connect.
7. If you're ready to configure and wire AC input power, leave the rear cover off and skip to next section.
8. If you're not ready to configure and wire AC input power at this time, then return rear cover to back of charger and secure with its original screws.

### 3.6 Configure and Wire AC Input Power



#### ELECTRICAL WARNINGS – WARNING! RISK OF ELECTRIC SHOCK!

**WARNING! SHUT OFF POWER SUPPLY BEFORE BEGINNING INSTALLATION ACTIVITIES. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**

**WARNING! RISK OF ELECTRIC SHOCK! DO NOT PROVIDE LIVE POWER TO THE EV QUICK CHARGER UNTIL BUS BAR CONFIGURATION AND AC WIRING IS COMPLETE AND THE AC SERVICE PANEL IS IN PLACE AND SECURE.**

**WARNING! RISK OF ELECTRIC SHOCK! ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS TYPE OF EQUIPMENT AND THE HAZARDS INVOLVED SHOULD ADJUST, MODIFY, AND SERVICE THIS EQUIPMENT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**



**CAUTION! The installer is responsible for conforming to all local and national electrical codes and standards applicable in the jurisdiction this equipment is installed in, including providing suitable wire sizes per NEC for the input configuration.**

1. Ensure AC power to EV quick charger is turned OFF at site's upstream AC breaker.
2. Determine which of the three supported configurations is required for this installation.
  - 240V (single phase):** Line 1, Line 3, Ground
  - 208V/240V 3-phase Delta (3-wire + PE):** Line 1, Line 2, Line 3, Ground
  - 480V 3-phase Wye (3-wire + Neutral + PE):** Line 1, Line 2, Line 3, Neutral, Ground




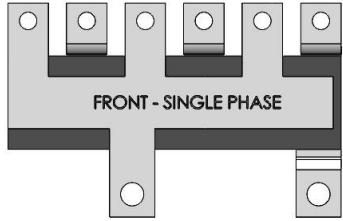
| 240 V (single phase)                                                                | 208/240 V 3-phase Delta (3-wire + PE)                                                                                                                                                                          | 480 V 3-phase Wye (3-wire + Neutral + PE)                                                                                                                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                                                                                             |                                                                                                                     |
|                                                                                     |  <b>CAUTION! DO NOT USE this Delta bus bar for a 480V 3-phase (3-wire + Neutral + PE) source, which requires a neutral.</b> |  <b>CAUTION! This source requires the Neutral line to be supplied and connected to prevent damage to equipment.</b> |


Figure 13—Configuration Bus Bar to install for each supported AC Input Power Configuration

3. If charger's rear screen is on, use a T25 Torx t-handle screwdriver to remove the 10 buttonhead screws around rear screen's perimeter, set screen and screws aside (see Figure 14).

**Figure 14— Opening Rear Screen by removing 10 screws around perimeter of rear cover**

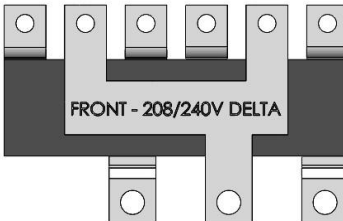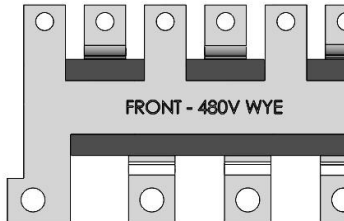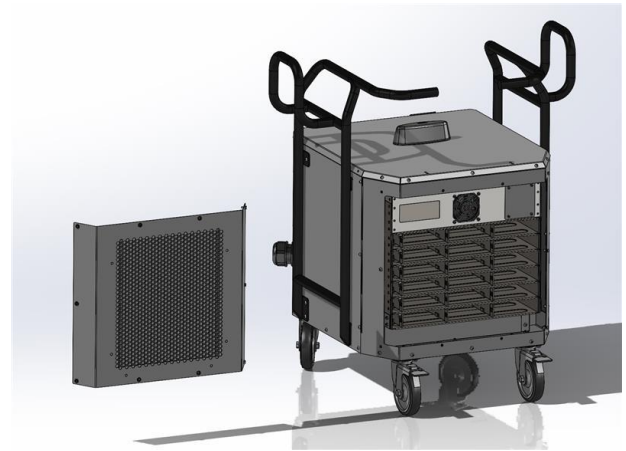

4. In the opened-rear charger, locate shipping/storage location of the stack of three Configuration Bus Bars anchored with nuts in the bottom (like Figure 15).

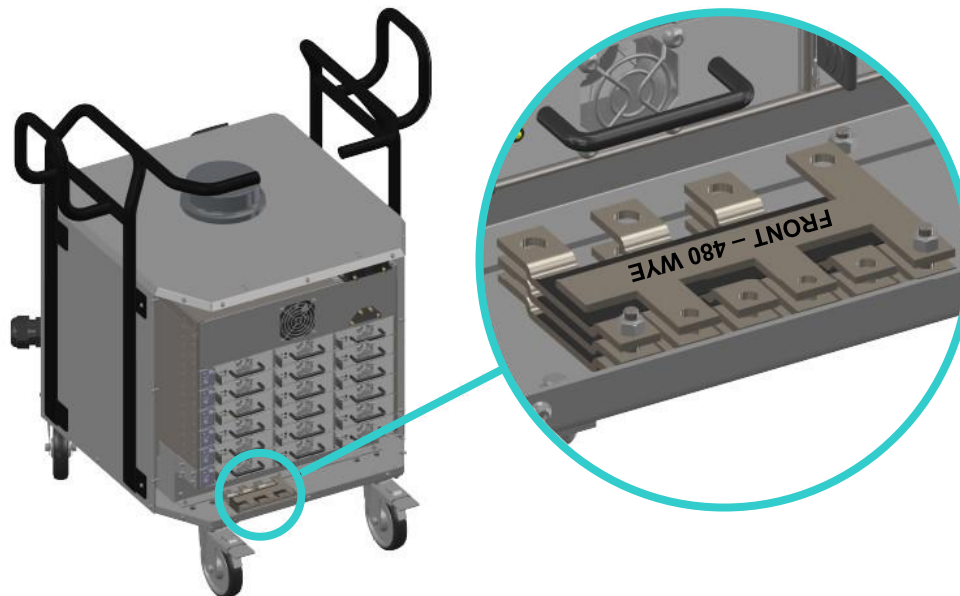


**Figure 15—Shipping state of 3 Configuration Bus Bars, stacked and anchored in storage area in rear of charger**

5. Remove nuts anchoring configuration bus bars together in the bottom of charger, select the one needed for this installation (refer to Step 2 and Figure 13), and then re-anchor the two spare configuration bus bars in their original shipping/storage position.
6. Return rear screen to back of charger and secure with its original 10 screws.
7. Do not store or operate this mobile quick charger in a hazardous location.



**WARNING! RISK OF ELECTRIC SHOCK!**  
**DO NOT STORE OR OPERATE CHARGER IN A HAZARDOUS LOCATION!**

8. Open front panel of charger using a T25 Torx t-handle screwdriver to remove 6 buttonhead screws around the perimeter of the front panel, then set panel and screws aside (see **Figure 16**).

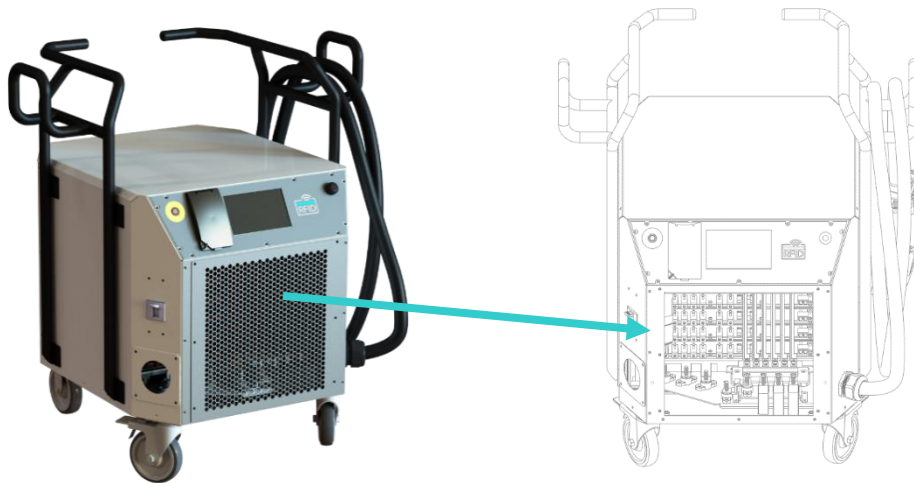

**Figure 16— Opening Front Panel by removing screws around panel's perimeter**

9. Remove the six M6 and four M8 socket head cap screws that secure plastic spacer plate to Bus Bar (Figure 17), remove spacer plate from Bus Bar, and discard spacer plate.




**Figure 17— M6 and M8 socket head cap screws must be removed to remove plastic spacer plate**

10. Install the Configuration Bus Bar required for this charger's AC input power as follows:
  - a. Place selected Configuration Bus Bar on the Bus Bar with its "FRONT" stamp facing out (such as the "FRONT – 480 WYE" example shown in Figure 18).
  - b. Secure 6 upper socket head cap screws, hand tight only and not over 177 in-lbs (20 N-m).
  - c. Secure 4 lower socket head cap screws, hand tight only and not over 424 in-lbs (48 N-m).



**CAUTION!** Configuration Bus Bar must be loaded and secured on Bus Bar with the "FRONT" stamp facing out, as shown in Figure 18.

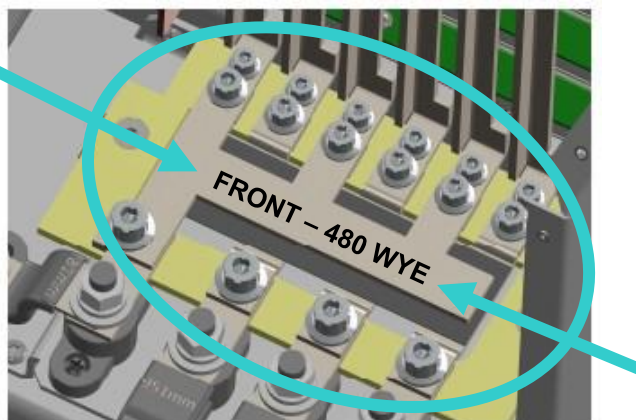

**Figure 18— Shown: "FRONT – 480 WYE" configuration bus bar secured on Bus Bar;  
Not shown: Spare configuration bus bars, Delta and Single, anchored together in storage area**

11. Using the voltage and current intended to be supplied to charger (selected in Step 3), select the proper cable type needed for this charger and this installation per NFPA 70 (NEC) Code Requirements.
12. Based on cable type needed and outer diameter of selected cable, use the following table to select the AC Input cover plate (Figure 19) and the cord grip/cable gland (Figure 20) suitable for your AC input power cord/cable.

| Cable OD (mm)                     | 18 - 25 mm | 31 - 41 mm | 44 - 51 mm |
|-----------------------------------|------------|------------|------------|
| Cable Gland Thread Diameter (mm)  | 38.1 mm    | 50 mm      | 63.5 mm    |
| Cable Gland Thread Diameter (in.) | 1.5 in.    | 2 in.      | 2.5 in.    |



**Figure 19—AC Input Cover Plates included**



**Figure 20—Three sizes of Cord Grip/Cable Glands included**


13. Feed AC Input power cord through cord grip/cable gland and conduit plate and secure to the mobile charger.

**14.** Notice the three AC input power wiring configurations shown in Figure 21, then select the wiring configuration and ring terminals needed for this charger.

- Ring terminal (ring lug) for Neutral or a Line wire must fit 3/8-inch diameter junction block stud.
- Ring terminal (ring lug) for Earth Ground must fit M8 (5/16-inch) diameter stud.

**15.** Using properly-sized ring terminals (as described above), wire AC Input Power to charger's AC Main landing stud per Figure 21 and local and national regulations, then tighten the nuts on all 5 studs (L1, L2, L3, PE, N) to 17 N-m (150 in-lb.).

- **Reminder:** The installer is responsible for conforming to all local and national electrical codes and standards applicable in the jurisdiction this equipment is installed in, including providing suitable wire sizes (Figure 21) and ring lugs (Step 14) per NEC for the input configuration.
- This charger can accept Copper (Cu) and Aluminum (Al) input cables suitable for the current rating per NEC by using the installer-provided ring terminals (or ring lugs) rated to accept the Cu or Al input cables.

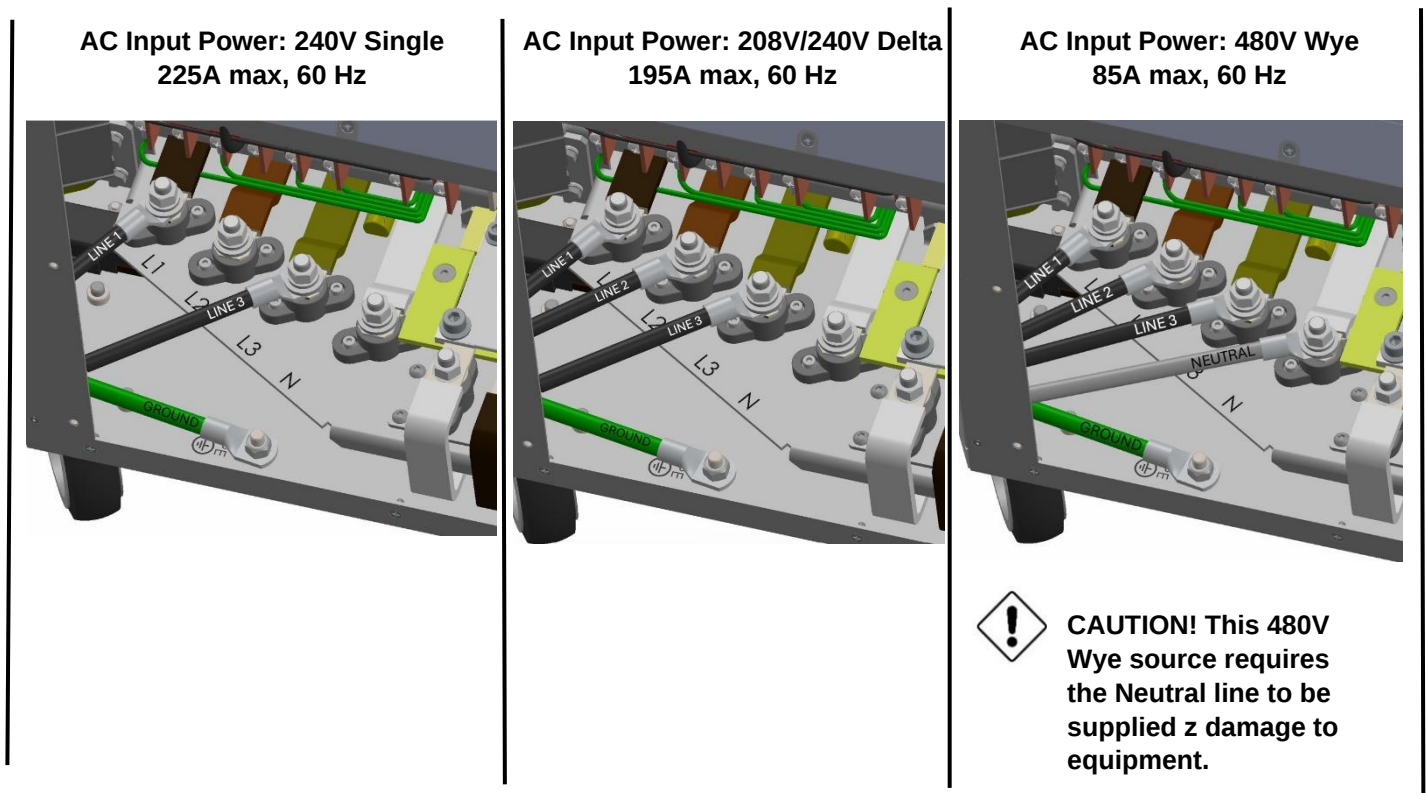

*Figure 21—AC Input Wiring for different AC Input Power Configuration*

**16.** After all input power wires have been secured to AC Main landing stud connectors:

At site's AC circuit breaker, turn on breaker and check voltage input.

If voltage input is OK, turn ON charger's AC Main Switch.

If voltage is not OK, turn OFF site's circuit breaker before troubleshooting.

**17.** Reinstall Front Panel and secure with original screws using the T25 Torx t-handle screwdriver to 142±10 in-lbs (16±5 N-m).

**18.** Continue to the next section to power the charger On, set up power levels, and operate the charger.

## 4—Setting Up Power Level and Operating EV Quick Charger

### 4.1 Set Power Level for Desired Operating Location

- 4.1.1** Do not store or operate this mobile quick charger in a hazardous location.



**WARNING! RISK OF ELECTRIC SHOCK!**  
**DO NOT STORE OR OPERATE CHARGER IN A HAZARDOUS LOCATION!**

- 4.1.2** Calculate Maximum Charger Power Level allowed for current location using configuration information and this table (also found on a label provided). This will help you avoid tripping sites AC circuit breaker due to overload.

| <b>Pii POWER INNOVATIONS INTERNATIONAL</b> <b>Maximum Charger Power Setting* (kW)</b> |                    |      |      |                   |      |      |
|---------------------------------------------------------------------------------------|--------------------|------|------|-------------------|------|------|
| Upstream Circuit Breaker Rating                                                       | Single Phase Panel |      |      | Three Phase Panel |      |      |
|                                                                                       | 208V               | 220V | 240V | 208V              | 240V | 480V |
| 50A                                                                                   | 8                  | 8    | 9    | 14                | 16   | 33   |
| 75A                                                                                   | 12                 | 13   | 14   | 21                | 24   | 49   |
| 100A                                                                                  | 16                 | 17   | 19   | 28                | 33   | 60   |
| 125A                                                                                  | 20                 | 22   | 24   | 36                | 41   | 60   |
| 150A                                                                                  | 25                 | 26   | 28   | 43                | 49   | 60   |
| 175A                                                                                  | 29                 | 30   | 33   | 50                | 58   | 60   |
| 200A                                                                                  | 33                 | 35   | 38   | 57                | 60   | 60   |
| 225A                                                                                  | 37                 | 39   | 43   | 60                | 60   | 60   |
| 250A                                                                                  | 41                 | 44   | 48   | 60                | 60   | 60   |
| 300A                                                                                  | 49                 | 52   | 57   | 60                | 60   | 60   |
| *Set by user based on input voltage and upstream breaker                              |                    |      |      | GL000xx           |      |      |

**Figure 22—Maximum Charger Power Rating (kW) set by user based on input voltage and upstream break**

- 4.1.3** Switch Main Power Switch to ON, see LCD screen light and then see current power level setting display.




**Figure 23—AC main power switch in ON position and LCD display of current power level**

- 4.1.4** Set Maximum Charging Power setting at or below your calculation in step 1 as follows:



*Figure 24—Lift button cover and press top and bottom button simultaneously to enter Configuration Mode*

- 4.1.5** Lift button cover on front of charger, then press top and bottom buttons at same time (Figure 24) to enter Configuration Mode. For confirmation of entering Configuration Mode, ensure the - and + signs in the Power Limit displayed on the screen have brightened (Figure 25).

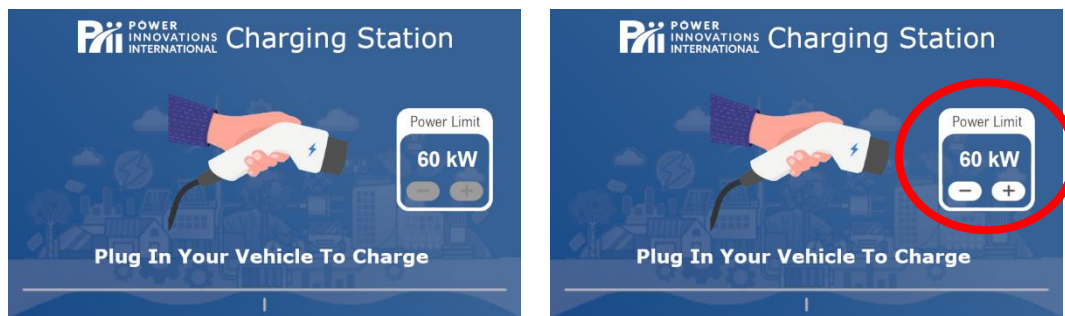

*Figure 25—On-screen display of Maximum Power Level – and + buttons will brighten when charger enters Configuration Mode*

- 4.1.6** Press top or bottom button to increase or decrease maximum power level respectively in increments of 5 kW to set maximum setting at or below the maximum charger power setting allowed for current location (refer to Figure 22 for assistance).

For example, using the chart in Figure 22, if your Upstream Circuit Breaker Rating was 100A and you were using a 240 V three-phase panel, then the maximum charger power setting allowed for the configuration would be 33 kW. However, because this charger's maximum power settings are set in increments of 5 kW, you would need to lower the setting to 30 kW—rounding down to the nearest 5 kW without going over the maximum allowed for your configuration.

- 4.1.7** New setting will display on screen. After a few seconds of inactivity, the charger will exit Configuration Mode (- and + are gray again) and your new setting is automatically saved.
- 4.1.8** Close button cover.
- 4.1.9** (Optional) Padlock the cover with ¼ inch padlock to ensure charger maintains Maximum Charging Power Setting and setting is changed only by trained personnel given access.

## 4.2 Operate EV Quick Charger

4.2.1 Click to release EV cable plug from docking station and plug into EV.





4.2.2 Use one of the payment methods your charger supports to initiate a charging session. For example, if using an RFID card provided for this charger, tap the card on the charger's RFID Reader.




4.2.3 Watch display for payment authorization:  
 If payment method was accepted, the message “Authorized” displays and you can continue.  
 If payment method was not accepted, leave EV cable plugged into EV and try payment method again.




- 4.2.4 Follow on-screen displays to ensure charger connects to vehicle and the charging cycle begins. Once charging cycle successfully starts, the charging progress displays.

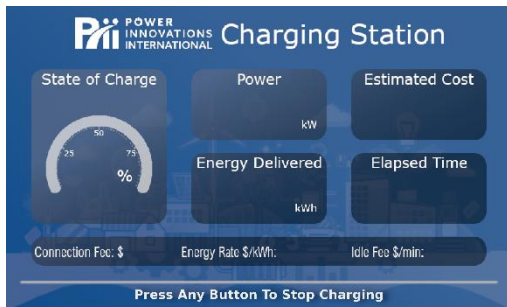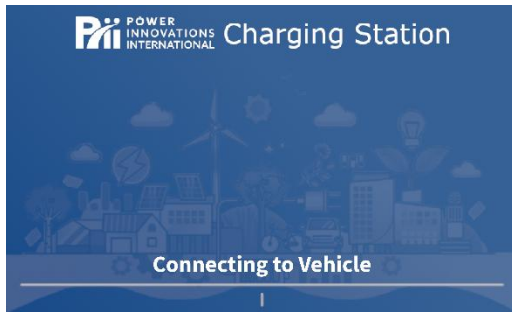

- 4.2.5 The charger will automatically complete the charging cycle if left undisturbed. If you wish to stop charging cycle early, press any button. When the charging cycle ends or is stopped, the following prompt displays.

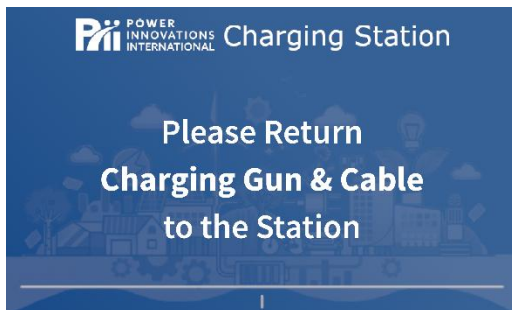

- 4.2.6 Click to release EV cable plug (gun) from EV and return it to docking station. An on-screen receipt displays.

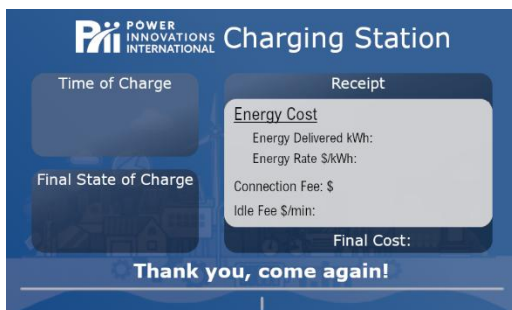

## 5—Maintaining EV Charger



**ELECTRICAL WARNING! -  
WARNING! RISK OF ELECTRIC SHOCK!**

**WARNING! RISK OF ELECTRIC SHOCK! SHUT OFF POWER SUPPLY AT AC BREAKER BEFORE BEGINNING MAINTENANCE ACTIVITIES AND BEFORE REMOVING EV QUICK CHARGER'S AC SERVICE PANEL FOR ANY MAINTENANCE WORK. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE INJURY OR DEATH.**

**WARNING! RISK OF ELECTRIC SHOCK! THIS EV CHARGER AND CHARGING CABLE ARE ENERGIZED. BEFORE SERVICING THE CHARGER OR CABLE, SHUT OFF POWER SUPPLY TO CHARGER, CLICK HANDLE TO RELEASE CABLE PLUG FROM EV, AND RETURN CABLE PLUG TO THE DOCKING STATION.**



**CAUTION! Maintenance tasks should only be completed as directed in this section. When in doubt, contact Power Innovations on how to proceed.**

**AVERTISSEMENT ÉLECTRIQUE ! -  
AVERTISSEMENT ! RISQUE DE CHOC ÉLECTRIQUE !**

**ATTENTION ! RISQUE DE CHOC ÉLECTRIQUE ! ÉTEIGNEZ L'ALIMENTATION ÉLECTRIQUE AU DISJONCTEUR À COURANT ALTERNATIF AVANT DE COMMENCER LES ACTIVITÉS DE MAINTENANCE ET AVANT DE RETIRER LE PANNEAU D'ENTRETIEN CA DU CHARGEUR RAPIDE POUR VE POUR TOUT TRAVAIL DE MAINTENANCE. LE NON-RESPECT DE CETTE PRÉCAUTION POURRAIT ENTRAÎNER DES BLESSURES GRAVES OU LA MORT.**

**ATTENTION ! RISQUE DE CHOC ÉLECTRIQUE ! CE CHARGEUR DE VE ET CE CÂBLE DE CHARGE SONT SOUS TENSION. AVANT D'ENTREtenir LE CHARGEUR OU LE CÂBLE, COUPEZ L'ALIMENTATION DU CHARGEUR, CLIQUEZ SUR POIGNÉE POUR LIBÉRER LA PRISE DE CÂBLE DE L'EV ET RETOURNEZ LA PRISE DE CÂBLE À LA STATION D'ACCUEIL.**

**ATTENTION ! Les tâches d'entretien ne doivent être effectuées que conformément aux directives de la présente section. En cas de doute, contactez Power Innovations sur la façon de procéder.**

### 5.1 Clean Air Vents and Filter

To help maintain the life of your cooling fans, clean the filter as needed. There are two options for how the filter can be installed in the charger, which is based on operator preference: Internal to charger or External to charger:

#### 5.1.1 If Filter is installed Externally


- 5.1.1.1 Remove filter by pulling up on filter frame.
- 5.1.1.2 Wash filter with clean water and let air dry.
- 5.1.1.3 Reinstall filter in same slot.

#### 5.1.2 If Filter is installed Internally

- 5.1.2.1 Turn AC Main Switch on front of charger to OFF.
- 5.1.2.2 Remove screen from rear cover.
- 5.1.2.3 Remove filter from screen.
- 5.1.2.4 Wash filter with clean water and let air dry.

- 5.1.2.5 Reinstall filter in same slot.
- 5.1.2.6 Reattach screen to rear cover with filter on the inside (to secure the filter) or on the outside (to make filter easier to access for future cleaning).
- 5.1.2.7 Turn AC Main Switch on front of charger to On.

**Figure 26—Rear screen is reversible so filter is accessible after rear screen is once again secured to rear cover**

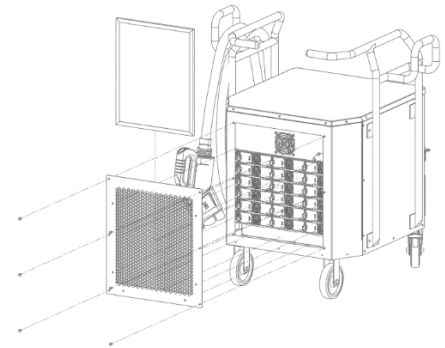

## 5.2 Replace Air Filter

The chargers filter can be replaced. Please contact Power Innovations for replacement part or order from McMaster Carr: Part Number 2150K17.

## 5.3 Restart after Emergency Stop

This Emergency Stop button is an emergency ON/OFF operator button for the quick charger's charging sessions. Any time the Emergency Stop button has been pressed and is recessed, it is in the OFF position. To reset the button, press it once to make it flush again and put it in the ON position. With the Emergency button flush, the charger is ready for the next charging session to be started.



**Figure 27—Emergency Stop Button is ON/OFF operator button: Recessed is OFF and Flush is ON**

If the Emergency Stop button is pressed during a charging session, charging is stopped, an Error Message displays in LCD (see Figure 28), and the button stays recessed.



**Figure 28—Error Message displays in LCD screen when Emergency Stop Button is depressed**

Before a new charging session can be started following this Error Message:

1. Charging cable must be unplugged from EV and returned to Docking Station.
2. Emergency Stop button must be reset to the flush/ON position by pressing it once.

*Note: Resetting the button does not start a new charging session, but it prepares the charger to support the next charging session started.*

## 6—Regulatory

---

### UL & CSA

This product and its documentation comply with the following UL and CSA Standards:

- UL 2202 Standard for Safety: Electric Vehicle (EV) Charging System Equipment
- UL 2231-1 Standard for Safety: Personnel Protection Systems for Electric Vehicle (EV) Supply Circuits; Part 1: General Requirements
- CSA C22.2 346 (Canadian Standards Association) – DC Charging Equipment for Electric Vehicles
- CSA C22.2 281.1 – Personnel Protection Systems for Electric Vehicle Supply Circuits

## 7—Warranty

---

Power Innovations International warrants that products purchased hereunder are free and clear of all liens and encumbrances.

Power Innovations International warrants that products are to be free from material or workmanship defect under normal use for a period of two (2) years from the invoice date.

In the event that any defect is found under normal usage conditions during the above warranty period, Power Innovations International will be responsible for repair or replacement at its sole discretion and subject to the replacement may be refurbished products.

All repair covered by this warranty must be done at Power Innovations International factory, or other repair facilities as designated by Power Innovations International unless Power Innovations International specifically directs that this service be performed at another location or service provider.

Customer shall, at its own costs, be responsible for shipping the defective products to the designated repair facilities subject to a RMA issued by Power Innovations International.

Power Innovations International will be responsible for shipping the repaired or refurbished unit back to the customer.

Power Innovations International shall not have any warranty obligations for claims: (i) caused by the misuse or abuse of products by end users; (ii) caused by modifications or repairs made to the products or disassembly of products by any person other than Power Innovations International, unless receiving Power Innovations International authorization; (iii) in relation to the appearance damage.

This Warranty Term states the exclusive liability of Power Innovations International and the exclusive remedy of buyer/customer with respect to any claim or defects of the products.

## 8—Contact Information

---

If there are any questions or comments about this product, please feel free to contact us.

**Power Innovations International, Inc.**

**Web:** [www.powerinnovations.com/support](http://www.powerinnovations.com/support)

**Phone:** 801-785-4123

**Mailing Address:** 1305 South 630 East, American Fork, UT 84003

**Copyright © 2023-2025**

Power Innovations International, Inc. American Fork, UT, USA

*All rights reserved.*